



NUMBER: 08-058-05

GROUP: Electrical

DATE: October 29, 2005

This bulletin is supplied as technical information only and is not an authorization for repair. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise, without written permission of DaimlerChrysler Corporation.

SUBJECT:

Revised Radio Antenna Mast Installation Procedure

MODELS:

2005 - 2006	(DR/DH/D1)	Ram Truck
2005 - 2006	(HB)	Durango
2005 - 2006	(ND)	Dakota
2005 - 2006	(PL)	Neon
2005 - 2006	(PT)	PT Cruiser
2005 - 2006	(RS)	Town & Country/Caravan

DISCUSSION:

The installation procedure for the radio antenna mast has been revised. Please use the following procedure when installing the antenna mast to the antenna base.

CAUTION: Do not exceed the torque specification in the step below. Damage to the antenna mast and/or base may occur if the tightening torque is exceeded.

1. Install antenna mast to antenna base. Finger tighten the antenna mast until it is fully seated on antenna base; no gap between the mast and base. Using a torque wrench, tighten the antenna mast to 3.4 - 3.6 N·m (30 - 32 in. lbs.) ([Fig. 1](#)).

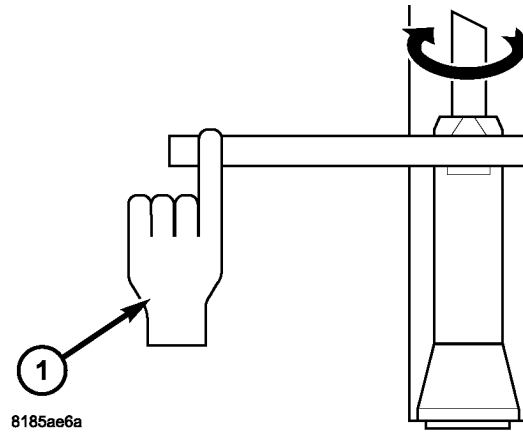


Fig. 1 TIGHTENING THE ANTENNA MAST

1 - USE A SHORT WRENCH. TIGHTEN WITH YOUR FINGER, NOT YOUR HAND. TIGHTEN TO 3.4 - 3.6 N·m (30 - 32 in. lbs.) **DO NOT OVERTIGHTEN!**

POLICY:
Information Only