

BATTERY

TABLE OF CONTENTS

	page		page
GENERAL INFORMATION		CHARGING COMPLETELY DISCHARGED	
INTRODUCTION	1	BATTERY	8
DESCRIPTION AND OPERATION		VISUAL INSPECTION	9
BATTERY IGNITION OFF DRAW (IOD)	2	REMOVAL AND INSTALLATION	
CHARGING TIME REQUIRED	2	BATTERY	10
DIAGNOSIS AND TESTING		BATTERY THERMOWRAP	10
BATTERY BUILT-IN TEST INDICATOR	3	BATTERY TRAY	11
BATTERY IGNITION OFF DRAW (IOD)	4	SPECIFICATIONS	
BATTERY LOAD TEST	6	BATTERY SPECIFICATIONS	11
BATTERY OPEN CIRCUIT VOLTAGE	7	TORQUE	11
SERVICE PROCEDURES			
BATTERY CHARGING	7		


GENERAL INFORMATION

INTRODUCTION

The battery (Fig. 1) stores, stabilizes, and delivers electrical current to operate various electrical systems in the vehicle. The determination of whether a battery is good or bad is made by its ability to accept a charge. It also must supply high-amperage current for a long enough period to be able to start the vehicle. The capability of the battery to store electrical current comes from a chemical reaction. This reaction takes place between the sulfuric acid solution (electrolyte) and the lead +/- plates in each cell of the battery. As the battery discharges, the plates react with the acid from the electrolyte. When the charging system charges the battery, the water is converted to sulfuric acid in the battery. The concentration of acid in the electrolyte is measured as specific gravity using a hydrometer. The original equipment (OE) battery is equipped with a hydrometer (test indicator) built into the battery cover. The specific gravity indicates the battery's state-of-charge. The OE battery is sealed and water cannot be added.

The battery is vented to release gases that are created when the battery is being charged and discharged. The battery top, posts, and terminals should be cleaned when other under hood maintenance is performed.

When the electrolyte level is below the top of the plates, Yellow/Clear in the test Indicator, the battery must be replaced. The battery must be completely charged, and the battery top, posts, and cable clamps must be cleaned before diagnostic procedures are performed.

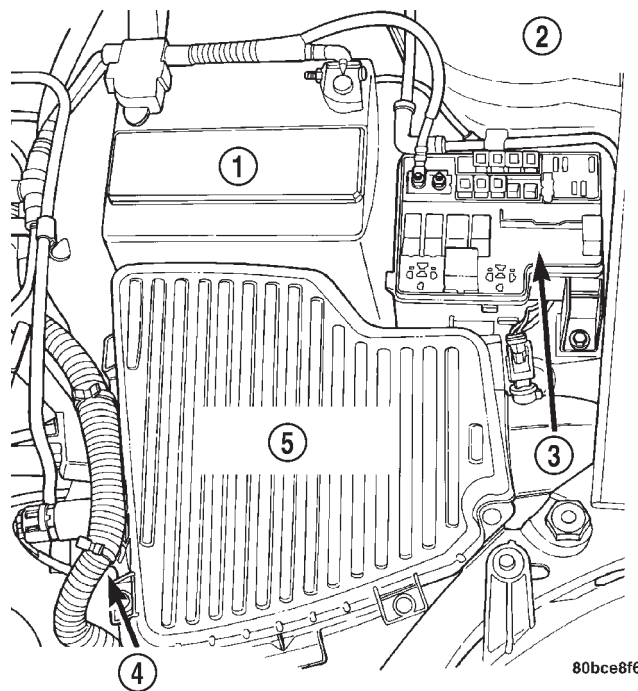

80bce8f6

Fig. 1 Battery Location

- 1 - BATTERY
- 2 - LEFT STRUT TOWER
- 3 - PDC
- 4 - THROTTLE BODY
- 5 - AIR CLEANER HOUSING

DESCRIPTION AND OPERATION

BATTERY IGNITION OFF DRAW (IOD)

A completely normal vehicle will have a small amount of current drain on the battery with the key out of the ignition. It can range from 4 to 10 milli-amperes after all the modules time out. If a vehicle will not be operated for approximately a 20 days, the IOD fuse should be disconnected to minimize the vehicle electrical drain on the battery. The IOD fuse is located in the Power Distribution Center (PDC). Refer to the PDC cover to locate the proper fuse.

CHARGING TIME REQUIRED

WARNING: NEVER EXCEED 20 AMPS WHEN CHARGING A COLD -1°C (30°F) BATTERY. PERSONAL INJURY MAY RESULT.

The time required to charge a battery will vary depending upon the following factors.

SIZE OF BATTERY

A completely discharged large heavy-duty battery may require more recharging time than a completely discharged small capacity battery, refer to Battery Charging Timetable for charging times.

BATTERY CHARGING TIMETABLE

CHARGING AMPERAGE	5 AMPERES	10 AMPERES	20 AMPERES
OPEN CIRCUIT VOLTAGE	HOURS CHARGING AT 21° C (70° F)		
12.25 TO 12.49	6 HOURS	3 HOURS	1.5 HOURS
12.00 TO 12.24	10 HOURS	5 HOURS	2.5 HOURS
10.00 TO 11.99	14 HOURS	7 HOURS	3.5 HOURS
*BELOW 10.00	18 HOURS	9 HOURS	4.5 HOURS
*REFER TO CHARGING A COMPLETELY DISCHARGED BATTERY			

TEMPERATURE

A longer time will be needed to charge a battery at -18°C (0°F) than at 27°C (80°F). When a fast charger is connected to a cold battery, current accepted by battery will be very low at first. In time, the battery will accept a higher rate as battery temperature warms.

CHARGER CAPACITY


A charger which can supply only five amperes will require a much longer period of charging than a charger that can supply 20 amperes or more.

STATE OF CHARGE

A completely discharged battery requires more charging time than a partially charged battery.

NOTE: Do not attempt to recharge a battery with a yellow/clear test indicator.

Electrolyte is nearly pure water in a completely discharged battery. At first, the charging current amperage will be low. As water is converted back to sulfuric acid inside the battery, the current amp rate will rise. Also, the specific gravity of the electrolyte will rise, bringing the green ball (Fig. 2) into view at approximately 75 percent state-of-charge.

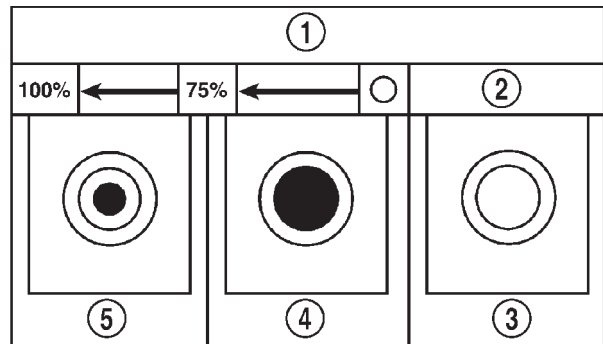

80a7236a

Fig. 2 Reading Test Indicator

- 1 - TEST INDICATOR/STATE OF CHARGE
- 2 - REPLACE BATTERY
- 3 - CLEAR
- 4 - BLACK
- 5 - GREEN

DIAGNOSIS AND TESTING
BATTERY BUILT-IN TEST INDICATOR

USING TEST INDICATOR

The Test Indicator (Fig. 2), (Fig. 3) and (Fig. 4) measures the specific gravity of the electrolyte. Specific Gravity (SG) of the electrolyte will show state-of-charge (voltage). The test indicator **WILL NOT** show cranking capacity of the battery. Refer to Battery Load Test for more information. Look into the sight glass (Fig. 2), (Fig. 4) and note the color of the indicator. Refer to the following description of colors:

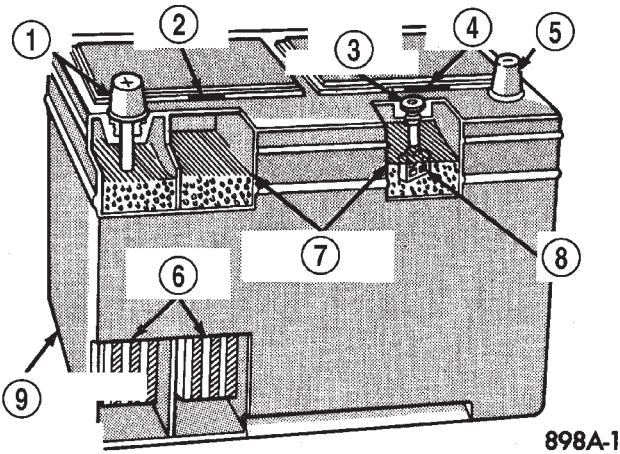



Fig. 3 Battery Construction and Test Indicator - Typical

- 1 - POSITIVE POST
- 2 - VENT
- 3 - TEST INDICATOR
- 4 - VENT
- 5 - NEGATIVE POST
- 6 - PLATE GROUPS
- 7 - ELECTROLYTE LEVEL
- 8 - GREEN BALL
- 9 - MAINTENANCE FREE BATTERY

NOTE: GREEN = 75 to 100% state-of-charge

The battery is adequately charged for further testing and may be returned to use. If the vehicle will not crank for a maximum 15 seconds, refer to BATTERY LOAD TEST in this Group for more information.

NOTE: BLACK OR DARK = 0 to 75% state-of-charge

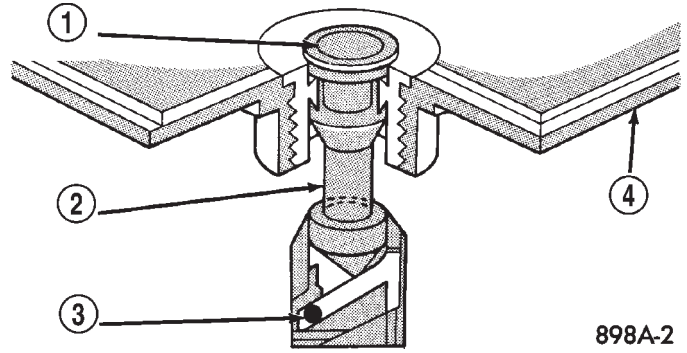

898A-2

Fig. 4 Test Indicator - Typical

- 1 - SIGHT GLASS
- 2 - PLASTIC TUBE
- 3 - GREEN BALL
- 4 - BATTERY TOP

The battery is **INADEQUATELY** charged and must be charged until green dot is visible, (12.4 open circuit volts or greater) before the battery is tested or returned to use. Refer to Causes of Battery Discharging in this group for more information.

NOTE: CLEAR COLOR = Replace Battery

WARNING: DO NOT CHARGE, ASSIST BOOST, LOAD TEST, OR ADD WATER TO THE BATTERY WHEN CLEAR COLOR DOT IS VISIBLE. PERSONAL INJURY MAY OCCUR.

A clear color dot shows electrolyte level in battery is below the test indicator (Fig. 2). Water cannot be added to a maintenance free battery. The battery must be replaced. A low electrolyte level may be caused by an over charging condition. Refer to Generator Test Procedures on Vehicle.

CAUSES OF BATTERY DISCHARGING

It is normal to have a small 5 to 25 milliamperes continuous electrical draw from the battery. This draw will take place with the ignition in the OFF position, and the courtesy, dome, storage compartments, and engine compartment lights OFF. The continuous draw is due to various electronic features or accessories that require electrical current with the ignition OFF to function properly. When a vehicle is not used over an extended period of approximately 20 days the IOD fuse should be pulled. The fuse is located in the power distribution center. Disconnection of this fuse will reduce the level of battery discharge. Refer to the Battery Diagnosis and Testing table, and to the proper procedures.

DIAGNOSIS AND TESTING (Continued)

BATTERY DIAGNOSIS AND TESTING

STEPS	POSSIBLE CAUSE	CORRECTION
VISUAL INSPECTION CHECK FOR POSSIBLE DAMAGE TO BATTERY AND CLEAN BATTERY.	(1) LOOSE BATTERY POST, CRACKED BATTERY COVER OR CASE, LEAKS OR ANY OTHER PHYSICAL (2) BATTERY OK.	(1) REPLACE BATTERY (2) CHECK STATE OF CHARGE. REFER TO TEST INDICATOR.
TEST INDICATOR CHECK CHARGE EYE COLOR	(1) GREEN (2) BLACK (3) CLEAR	(1) BATTERY IS CHARGED. PERFORM BATTERY OPEN CIRCUIT VOLTAGE TEST (2) PERFORM BATTERY CHARGING PROCEDURE. (3) REPLACE BATTERY.
BATTERY OPEN CIRCUIT VOLTAGE TEST	(1) BATTERY IS ABOVE 12.40 VOLTS (2) BATTERY IS BELOW 12.40 VOLTS.	(1) PERFORM THE BATTERY LOAD TEST. (2) PERFORM BATTERY CHARGING PROCEDURE.
BATTERY CHARGING	(1) BATTERY ACCEPTED CHARGE. (2) BATTERY WILL NOT ACCEPT CHARGE	(1) ENSURE THAT THE INDICATOR EYE IS GREEN AND PERFORM BATTERY OPEN CIRCUIT VOLTAGE TEST (2) PERFORM CHARGING A COMPLETELY DISCHARGED BATTERY.
BATTERY LOAD TEST	(1) ACCEPTABLE MINIMUM VOLTAGE. (2) UNACCEPTABLE MINIMUM VOLTAGE	(1) BATTERY IS OK TO PUT IN USE, PERFORM BATTERY IGNITION OFF DRAW TEST. (2) REPLACE BATTERY AND PERFORM BATTERY IGNITION OFF DRAW TEST.
CHARGING A COMPLETELY DISCHARGED BATTERY	(1) BATTERY ACCEPTED CHARGE. (2) BATTERY WILL NOT ACCEPT CHARGE.	(1) ENSURE THAT THE INDICATOR EYE IS GREEN AND PERFORM BATTERY OPEN CIRCUIT VOLTAGE TEST. (2) REPLACE BATTERY.
IGNITION OFF DRAW TEST	(1) IOD IS 5-25 MILLIAMPERES. (2) IOD EXCEEDS 25 MILLIAMPERES.	(1) VEHICLE IS NORMAL. (2) ELIMINATE EXCESS IOD DRAW.

ABNORMAL BATTERY DISCHARGING

- Corroded battery posts, cables or terminals.
- Loose or worn generator drive belt.
- Electrical loads that exceed the output of the charging system due to equipment or accessories installed after delivery.
- Slow driving speeds in heavy traffic conditions or prolonged idling with high-amperage electrical systems in use.

• Defective electrical circuit or component causing excess Ignition Off Draw (IOD). Refer to Battery Ignition Off Draw (IOD).

- Defective charging system.
- Defective battery.

BATTERY IGNITION OFF DRAW (IOD)

High current draw on the battery with the ignition OFF will discharge a battery. After a dead battery is recharged, the vehicle ignition off draw (IOD) should

DIAGNOSIS AND TESTING (Continued)

be checked. To determine if a high current draw condition exists first check the vehicle with a test lamp.

- (1) Verify that all electrical accessories are OFF.
 - Remove key from ignition switch
 - Turn off all lights
 - Trunk lid is closed
 - Engine compartment hood lamp is disconnected or lamp removed
 - Map lamp on rear view mirror
 - Glove box door is closed
 - Sun visor vanity lights are OFF
 - All doors are closed
 - Allow the ignition key lamp system to time out in approximately 30 seconds, if equipped.

(2) Disconnect battery negative cable (Fig. 5).

(3) Connect a 12 Volt test lamp, with a cold resistance of 5-7 ohms, between the battery negative cable clamp and the negative post (Fig. 6). If test lamp goes out system is OK. If test lamp lights and stays ON, go to Test Lamp Stays ON procedure.

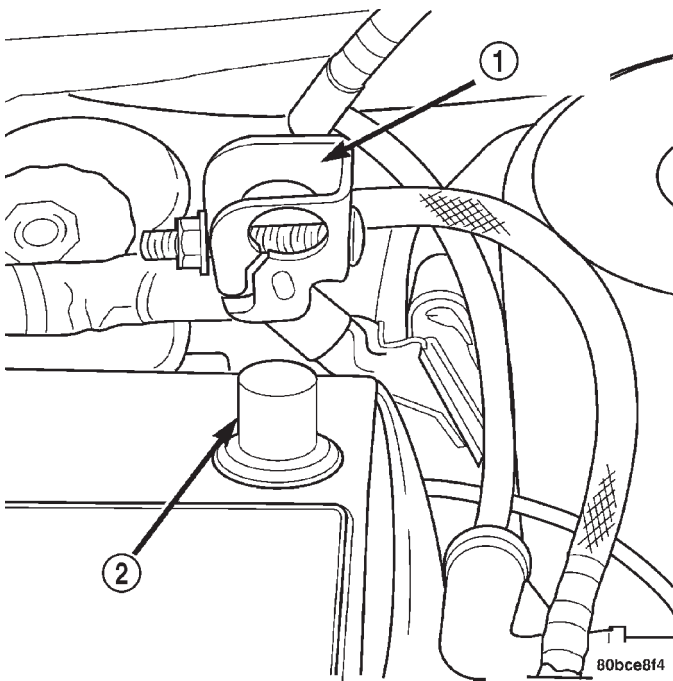


Fig. 5 Disconnect and Isolate Battery Negative Cable

- 1 - NEGATIVE CABLE
- 2 - NEGATIVE BATTERY POST

TEST LAMP STAYS ON

There is either a short circuit or a fault in an electronic module. Two fuses in the Power Distribution Center (PDC) feed the modules with ignition off draw.

- Interior lamps fuse (10 Amp) (IOD) PDC
- Fuel pump fuse (20 Amp) in PDC.

(1) Remove interior lamp and fuel pump fuses. By removing these fuses all ignition off draw from the

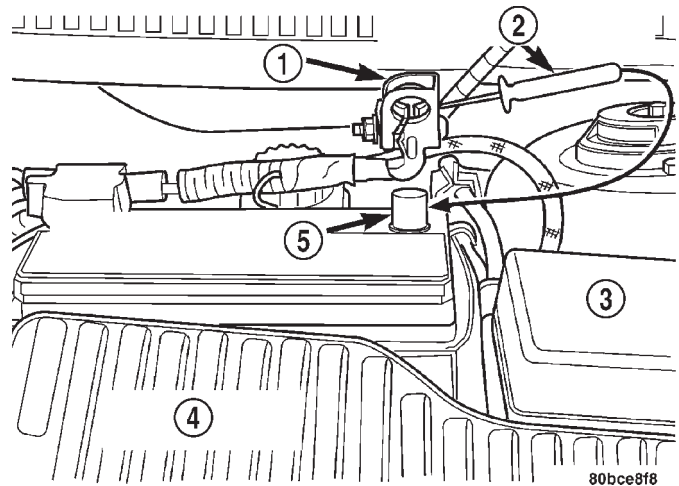


Fig. 6 Ignition OFF (IOD) Test

- 1 - NEGATIVE TERMINAL
- 2 - 12 VOLT TEST LIGHT
- 3 - PDC
- 4 - AIR CLEANER HOUSING
- 5 - NEGATIVE BATTERY POST

vehicle electronics will be disconnected. The test lamp should go out. If test lamp goes out go to Step 2. If test lamp does not go out there is a current draw or short circuit. Refer to Group 8W, Wiring Diagrams.

(2) Install the fuel pump fuse. If test lamp lights, there is a current draw or short circuit in the A14 wiring circuit feed.

(a) Disconnect Powertrain Control Module.

(b) If test lamp goes out, replace Powertrain Control Module.

(c) If test lamp does not go out, there is a current draw or short circuit in the A14 circuit feed. Refer to Group 8W, Wiring Diagrams.

(3) Install the interior lamp fuse. If test lamp lights, there is a current draw or short circuit in the M01 circuit. Refer to Group 8W, Wiring Diagrams. If test lamp stays out, go to Step 4.

(4) Use a multi-meter that has at least a range of 200 milliamperes. Install meter between the battery negative cable and battery negative post (Fig. 7). Carefully remove the test lamp without disconnecting the meter. After all modules time-out the total vehicle IOD should be less than 10 milliamperes. If ignition off draw is more than 10 milliamperes go to Step 5.

(5) Remove both fuses from the Power Distribution Center:

- Fuel pump fuse (20 Amp)
- Interior lamps fuse (10 Amp)

(6) If there is any reading with fuses removed there is a current draw or short circuit in the wiring.

DIAGNOSIS AND TESTING (Continued)

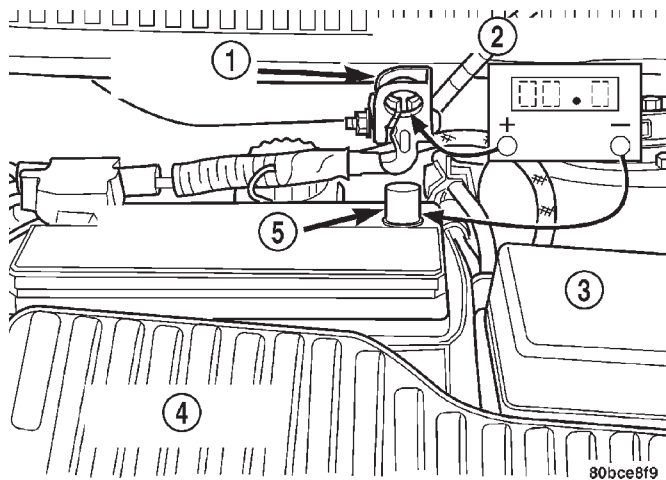


Fig. 7 Milliamper Meter Connection

- 1 - NEGATIVE TERMINAL
- 2 - MILLIAMPERE METER
- 3 - PDC
- 4 - AIR CLEANER HOUSING
- 5 - NEGATIVE BATTERY POST

Refer to Group 8W, Wiring Diagrams. If OK go to Step 7.

(7) Install interior lamp fuse. After installing fuse, the current can reach 250 milliamperes. After time-out the reading should not exceed 8 milliamperes. If NOT OK go to Step 8. If OK go to Step 9.

- Ignition key lamp system
- Radio
- Remote keyless entry module, if equipped

(8) Disconnect radio and ignition switch key lamp one component at time, to see if any component is at fault. If the high reading is not eliminated there is a short circuit in the wiring. Refer to Group 8W, Wiring Diagrams.

CAUTION: Always disconnect the meter before opening a door.

(9) Remove interior lamps fuse and install the fuel pump fuse. The reading should be between 1-3 milliamperes. If reading is higher than 3 milliamperes:

- (a) Disconnect Powertrain Control Module.
- (b) If reading drops to zero, replace Powertrain Control Module.
- (c) If reading remains the same there is a current draw or short circuit in the A14 circuit. Refer to Group 8W, Wiring Diagrams.

BATTERY LOAD TEST

A fully charged battery must have cranking capacity, to provide the starter motor and ignition system enough power to start the engine over a broad range of ambient temperatures. A battery load test will verify the actual cranking capability of the battery.

WARNING: IF BATTERY SHOWS SIGNS OF FREEZING, LEAKING, LOOSE POSTS, OR EXCESSIVELY LOW ELECTROLYTE LEVEL, DO NOT TEST. ACID BURNS OR AN EXPLOSIVE CONDITION MAY RESULT.

(1) Remove both battery cables, negative cable first. The battery top, cables and posts should be clean. If green dot is not visible in indicator, charge the battery. Refer to Battery Charging Procedures in this group.

(2) Connect a Volt/Ammeter/Load tester to the battery posts (Fig. 8). Rotate the load control knob of the Carbon pile rheostat to apply a 300 amp load. Apply this load for 15 seconds to remove the surface charge from the battery, and return the control knob to off (Fig. 9).


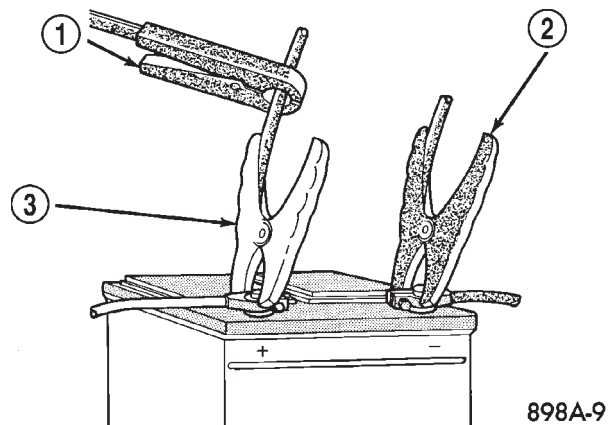


Fig. 8 Volt-Ammeter Load Tester Connections - Typical

- 1 - INDUCTION AMPMETER CLAMP
- 2 - NEGATIVE CLAMP
- 3 - POSITIVE CLAMP

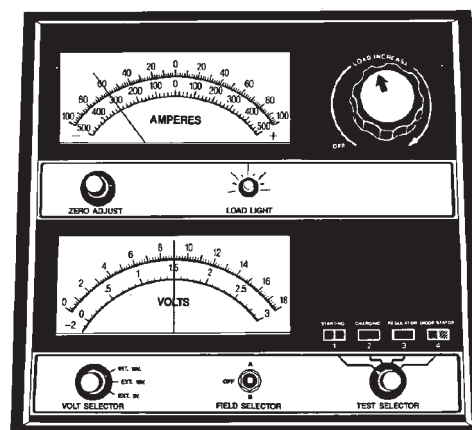


898A-10

Fig. 9 Remove Surface Charge From Battery

(3) Allow the battery to stabilize for 2 minutes, and then verify open circuit voltage.

DIAGNOSIS AND TESTING (Continued)

(4) Rotate the load control knob on the tester to maintain 50% of the battery cold crank rating for 15 seconds (Fig. 10). Record the loaded voltage reading and return the load control to off. Refer to the Battery Specifications at the rear of this group.

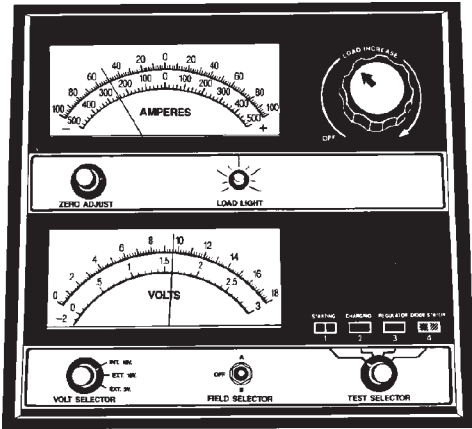

898A-11

Fig. 10 Load 50% Cold Crank Rating

(5) Voltage drop will vary according to battery temperature at the time of the load test. Battery temperature can be estimated by the temperature of exposure over the preceding several hours. If the battery has been charged or boosted a few minutes prior to the test, the battery would be slightly warmer. Refer to the Battery Load Test Temperatures table for proper loaded voltage reading:

BATTERY LOAD TEST TEMPERATURES

MINIMUM VOLTAGE	TEMPERATURE	
	°F	°C
9.6 VOLTS	70° AND ABOVE	21° AND ABOVE
9.5 VOLTS	60°	16°
9.4 VOLTS	50°	10°
9.3 VOLTS	40°	4°
9.1 VOLTS	30°	-1°
8.9 VOLTS	20°	-7°
8.7 VOLTS	10°	-12°
8.5 VOLTS	0°	-18°

(6) If battery passes load test, it is in good condition and further tests are not necessary. If it fails load test, it should be replaced.

BATTERY OPEN CIRCUIT VOLTAGE

An open circuit voltage no load test shows the state of charge of a battery and whether it is ready for a load test at 50 percent of the battery's cold crank rating. Refer to Battery Load Test. If a battery


has open circuit voltage reading of 12.4 volts or greater, and will not pass the load test, replace the battery because it is defective. To test open circuit voltage, perform the following operation.

(1) Remove both battery cables, negative cable first. Battery top, cables and posts should be clean. If green dot is not visible in indicator, charge the battery. Refer to Battery Charging Procedures.

(2) Connect a Volt/Ammeter/Load tester to the battery posts (Fig. 8). Rotate the load control knob of the Carbon pile rheostat to apply a 300 amp load. Apply this load for 15 seconds to remove the surface charge from the battery, and return the control knob to off (Fig. 9).

(3) Allow the battery to stabilize for 2 minutes, and then verify the open circuit voltage (Fig. 11).

(4) This voltage reading will approximate the state of charge of the battery. It will not reveal battery cranking capacity. Refer to Battery Open Circuit Voltage table.

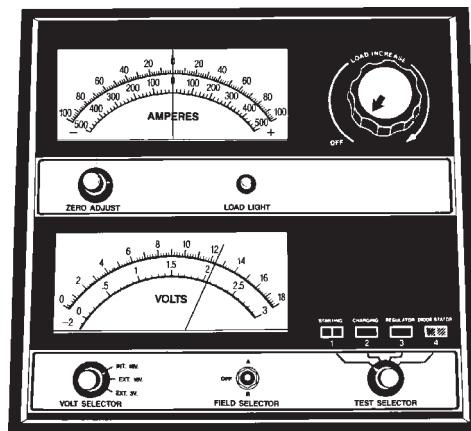

898A-7

Fig. 11 Testing Open Circuit Voltage

BATTERY OPEN CIRCUIT VOLTAGE

OPEN CIRCUIT VOLTS	CHARGE PERCENTAGE
11.7 VOLTS OR LESS	0%
12.0 VOLTS	25%
12.2 VOLTS	50%
12.4 VOLTS	75%
12.6 VOLTS OR MORE	100%

SERVICE PROCEDURES

BATTERY CHARGING

A battery is considered fully charged when it will meet all the following requirements.

- It has an open circuit voltage charge of at least 12.4 volts. Refer to the Battery Open Circuit Voltage table in this section.

SERVICE PROCEDURES (Continued)

- It passes the 15 second load test. Refer to Battery Load Test.
- The built in test indicator dot is GREEN (Fig. 2).

NOTE: The battery cannot be refilled with water, it must be replaced.

WARNING: DO NOT CHARGE A BATTERY THAT HAS EXCESSIVELY LOW ELECTROLYTE LEVEL. BATTERY MAY SPARK INTERNALLY AND EXPLODE. EXPLOSIVE GASES FORM OVER THE BATTERY. DO NOT SMOKE, USE FLAME, OR CREATE SPARKS NEAR BATTERY. DO NOT ASSIST BOOST OR CHARGE A FROZEN BATTERY. BATTERY CASING MAY FRACTURE. BATTERY ACID IS POISON, AND MAY CAUSE SEVERE BURNS. BATTERIES CONTAIN SULFURIC ACID. AVOID CONTACT WITH SKIN, EYES, OR CLOTHING. IN THE EVENT OF CONTACT, FLUSH WITH WATER AND CALL PHYSICIAN IMMEDIATELY. KEEP OUT OF REACH OF CHILDREN.

CAUTION: Disconnect the battery **NEGATIVE** cable first, before charging battery to avoid damage to electrical systems. Lift the red battery boot cover from the positive cable clamp. Do not exceed 16.0 volts while charging battery. Refer to the instructions supplied with charging equipment

Battery electrolyte may bubble inside of battery case while being charged properly. If the electrolyte boils violently, or is discharged from the vent holes while charging, immediately reduce charging rate or turn off charger. Evaluate battery condition. Battery damage may occur if charging is excessive.

Some battery chargers are equipped with polarity sensing devices to protect the charger or battery from being damaged if improperly connected. If the battery state of charge is too low for the polarity sensor to detect, the sensor must be bypassed for charger to operate. Refer to operating instructions provided with battery charger being used.

CAUTION: Charge battery until test indicator appears green. Do not overcharge.

It may be necessary to jiggle the battery or vehicle to bring the green dot in the test indicator into view.

After the battery has been charged to 12.4 volts or greater, perform a load test to determine cranking capacity. Refer to Battery Load Test in this Group. If the battery passes the load test, the battery is OK to use. If battery will not pass the load test, it must be replaced. Properly clean and inspect battery hold

downs, tray, terminals, cables, posts, and top before completing service.


CHARGING COMPLETELY DISCHARGED BATTERY

The following procedure should be used to recharge a completely discharged battery. Unless procedure is properly followed, a good battery may be needlessly replaced. Refer to Battery Charging Rate Table for proper charging time.

BATTERY CHARGING RATE

Voltage	Hours
16.0 volts maximum	up to 4 hours
14.0 to 15.9 volts	up to 8 hours
13.9 volts or less	up to 16 hours

(1) Measure the voltage at battery posts with a voltmeter accurate to 1/10 volt (Fig. 12). If below 10 volts, charge current will be low, and it could take some time before it accepts a current in excess of a few milliamperes. Such low current may not be detectable on amp meters built into many chargers.

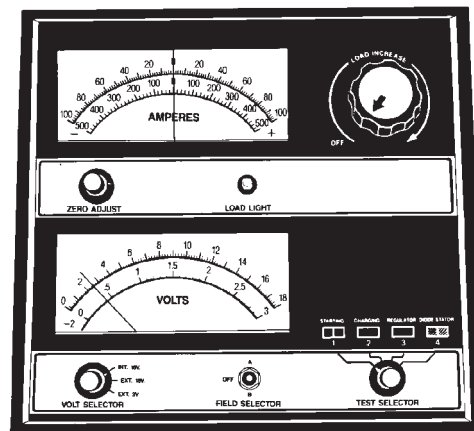

898A-12

Fig. 12 Voltmeter Accurate to 1/10 Volt (Connected)

(2) Connect charger leads. Some chargers feature polarity protection circuitry that prevents operation unless charger is connected to battery posts correctly. A completely discharged battery may not have enough voltage to activate this circuitry. This may happen even though the leads are connected properly.


(3) Battery chargers vary in the amount of voltage and current they provide. For the time required for the battery to accept measurable charger current at various voltages, refer to the Battery Charging Rate table. If charge current is still not measurable after charging times, the battery should be replaced. If charge current is measurable during charging time, the battery may be good, and charging should be completed in the normal manner.

SERVICE PROCEDURES (Continued)

VISUAL INSPECTION

CAUTION: Do not allow baking soda solution to enter vent holes, as damage to battery can result.

- (1) Clean top of battery with a solution of warm water and baking soda.
- (2) Apply soda solution with a bristle brush and allow to soak until acid deposits loosen (Fig. 13).

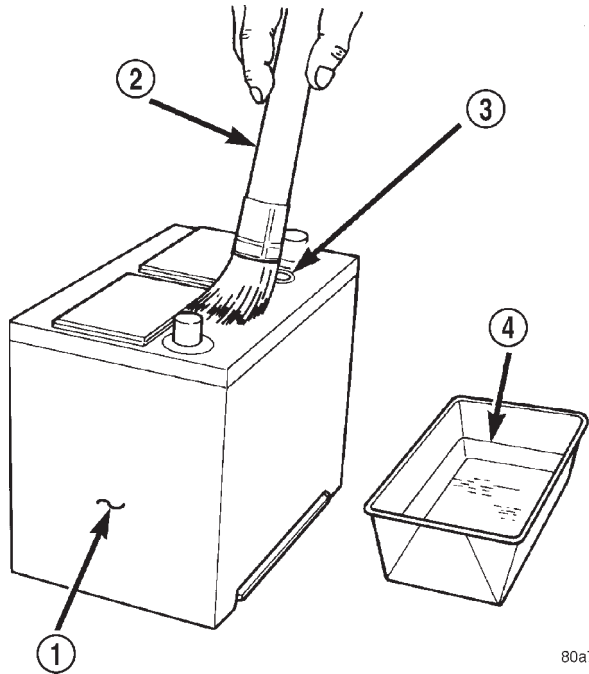

80a7236c

Fig. 13 Cleaning Battery - Typical

- 1 - BATTERY
- 2 - CLEANING BRUSH
- 3 - TEST INDICATOR
- 4 - WARM WATER AND BAKING SODA SOLUTION


(3) Rinse soda solution from battery with clear water and blot battery dry with paper toweling. Dispose of toweling in a safe manner. Refer to the WARNINGS on top of battery.

(4) Inspect battery case and cover for cracks, leakage or damaged hold down ledge. If battery is damaged replace it.

(5) Inspect battery tray for damage caused by acid from battery. If acid is present, clean area with baking soda solution.

(6) Clean battery posts with a battery post cleaning tool (Fig. 14).


(7) Clean battery cable clamps with a battery terminal cleaning tool (Fig. 15). Replace cables that are frayed or have broken clamps.

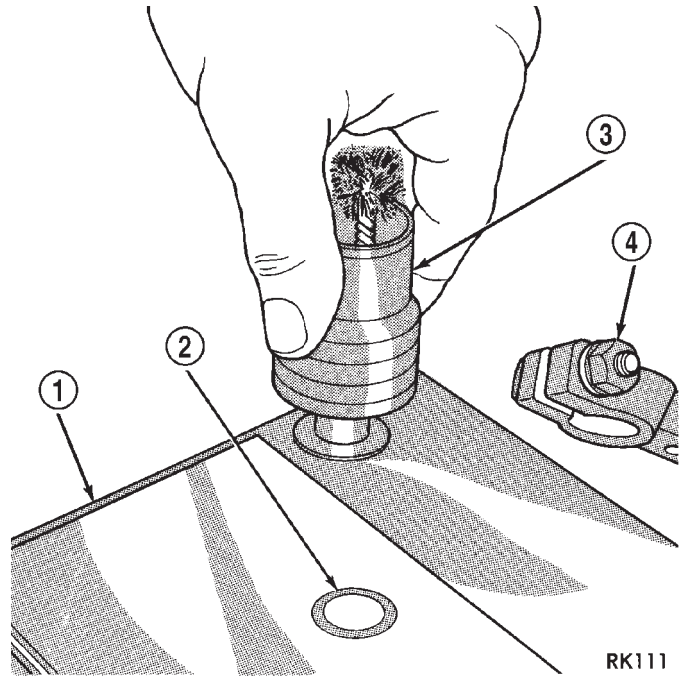

RK111

Fig. 14 Cleaning Battery Post - Typical

- 1 - BATTERY
- 2 - TEST INDICATOR
- 3 - BATTERY POST CLEANER
- 4 - BATTERY CABLE

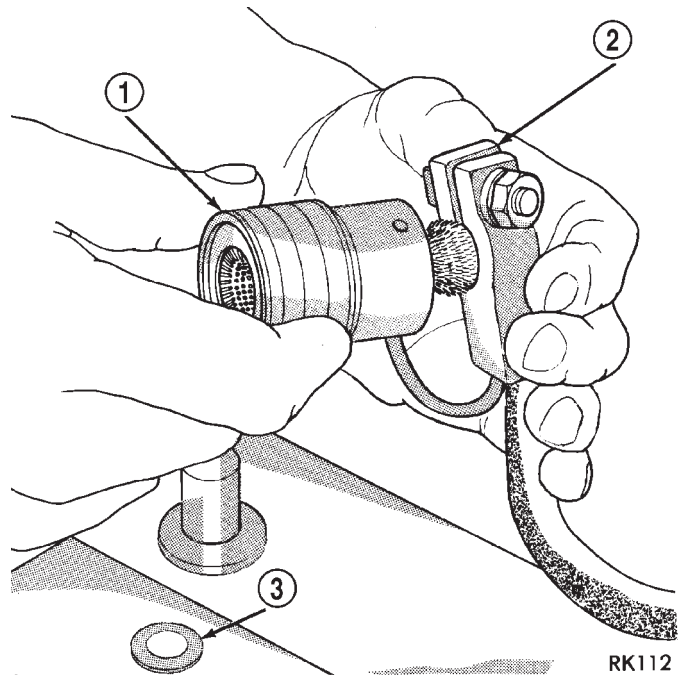

RK112

Fig. 15 Cleaning Battery Cable Terminal - Typical

- 1 - BATTERY CABLE CLEANING TOOL MX75
- 2 - BATTERY CABLE
- 3 - TEST INDICATOR

REMOVAL AND INSTALLATION

BATTERY

REMOVAL

WARNING: TO PROTECT THE HANDS FROM BATTERY ACID, A SUITABLE PAIR OF HEAVY DUTY RUBBER GLOVES, NOT THE HOUSEHOLD TYPE, SHOULD BE WORN WHEN REMOVING OR SERVICING A BATTERY. SAFETY GLASSES ALSO SHOULD BE WORN.

- (1) Make sure ignition switch is in OFF position and all accessories are OFF.
- (2) Open hood.
- (3) Disconnect and isolate the battery negative cable then the positive cable (Fig. 16).

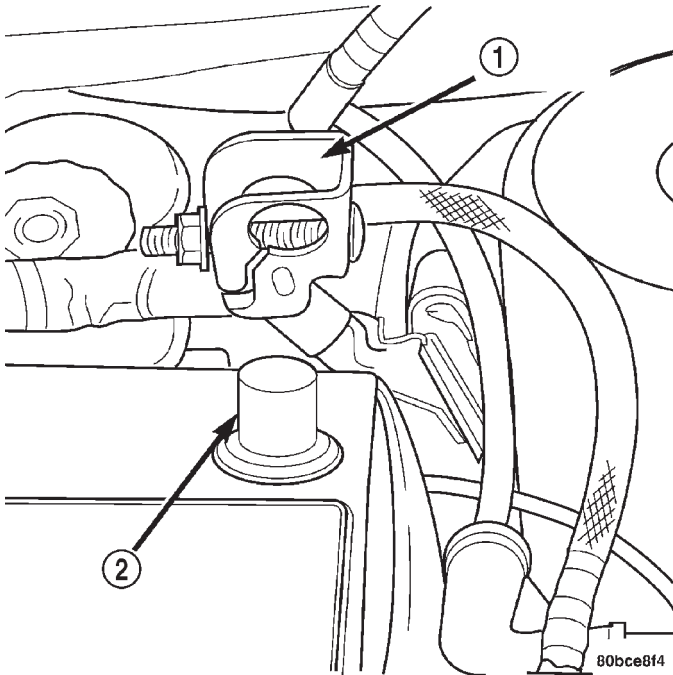


Fig. 16 Disconnect and Isolate the Battery Negative Cable

- 1 - NEGATIVE CABLE
2 - NEGATIVE BATTERY POST

- (4) Remove thermowrap from battery.
- (5) Loosen bolt and retainer that holds the battery down to the tray.
- (6) Lift battery out of battery tray and remove from vehicle.

INSTALLATION

When replacing battery, the Thermowrap **MUST** be transferred to the new battery. Refer to Battery Thermowrap Removal and Installation in this section.

- (1) Install battery in vehicle making sure that the thermowrap is present and battery is properly positioned on battery tray.

- (2) Install battery hold down clamp, making sure that it is properly positioned on battery.

- (3) Connect battery cable clamps to battery posts and making sure top of clamp is flush or below with top of post (Fig. 16). Install battery positive cable first.

- (4) Tighten clamp nuts securely.

BATTERY THERMOWRAP

REMOVAL

- (1) Open hood.
- (2) Disconnect and isolate the battery negative cable then the positive cable (Fig. 16).
- (3) Carefully lift the thermowrap off over the battery (Fig. 17) taking care not to rip it.

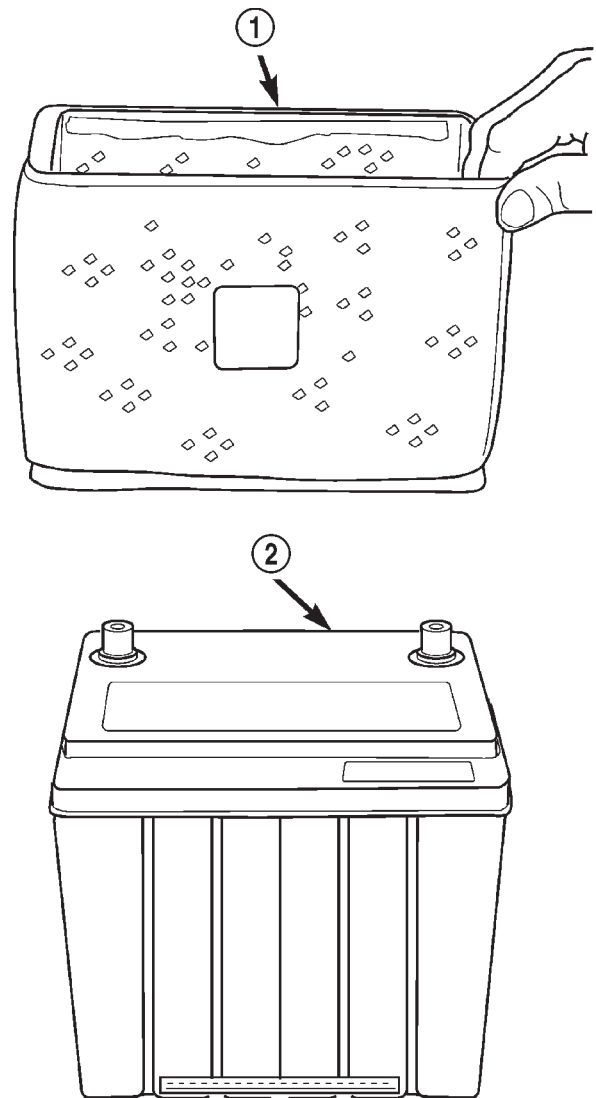


Fig. 17 Battery Thermowrap

- 1 - BATTERY THERMOWRAP
2 - BATTERY

80bdbcec

REMOVAL AND INSTALLATION (Continued)

(4) Remove the thermowrap from vehicle.

INSTALLATION

For installation, reverse the above procedures.

BATTERY TRAY

REMOVAL

(1) Remove battery. Refer to Battery Removal and Installation in this section.

(2) Remove two nuts to the rear and two bolts to the front of the battery tray (Fig. 18).

(3) Slide battery tray out from under the air cleaner assembly. Do not remove the air cleaner assembly.

(4) Remove battery tray from vehicle.

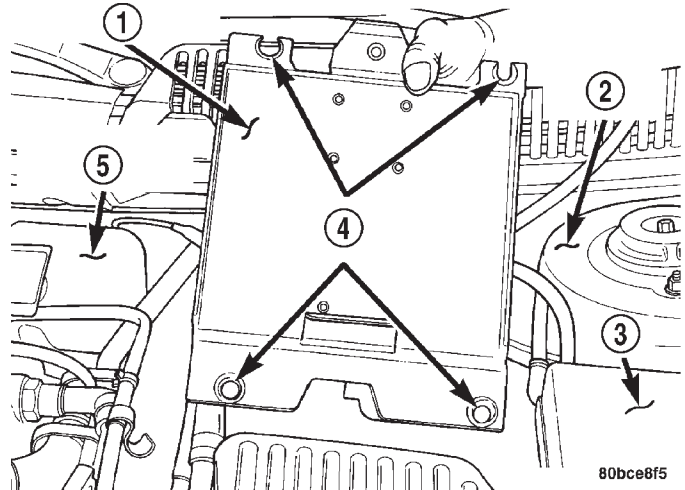


Fig. 18 Battery Tray Removal

- 1 - BATTERY TRAY
- 2 - LEFT STRUT TOWER
- 3 - PDC
- 4 - MOUNTING HOLES/SLOTS
- 5 - COOLANT RESERVOIR

INSTALLATION

For installation reverse the above procedures.

SPECIFICATIONS

BATTERY SPECIFICATIONS

COLD CRANK RATING

The current battery can deliver for 30 seconds and maintain a terminal voltage of 7.2 volts or greater at -18° C (0° F).

RESERVE CAPACITY RATING

The length of time a battery can deliver 25 amps and maintain a minimum terminal voltage of 10.5 volts at 27°C (80°F).

Load Test (Amps)	Cold Cranking Rating @ -18°C (0°F)	Reserve Capacity
225 Amp	450 Amp	85 Minutes

TORQUE

DESCRIPTION	TORQUE
Battery Hold Down Bolt Clamp Bolt	135 ± 15 in. lbs.
Battery Mount Fasteners	105 ± 10 in. lbs.

